



Salus IT500 Room Thermostat Quick Guide – Staff Areas

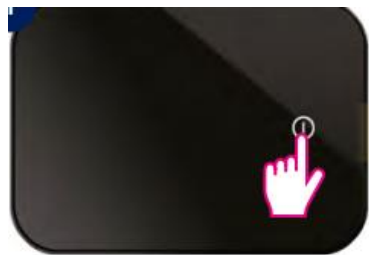


1. Getting Started

The IT500 is normally off to save battery life, to activate the screen and button illumination please press the icon as shown.
The screen will come on for approx.15 seconds, after this time it will automatically go off

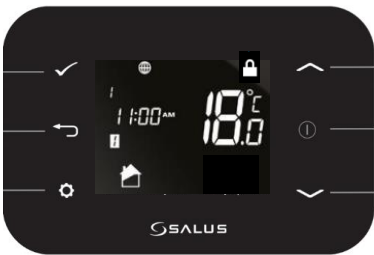

2. Button Layout

Button Description	
Button	Function
✓	Confirm
↶	Back/Cancel – SHORT press. Return to home screen – LONG press
⊞	Temporary Target Temperature active
⬆	Increase Temperature
⓪	Screen Activation
⬇	Decrease Temperature
Button combinations	
✓ + ↶	Press together to lock and unlock button

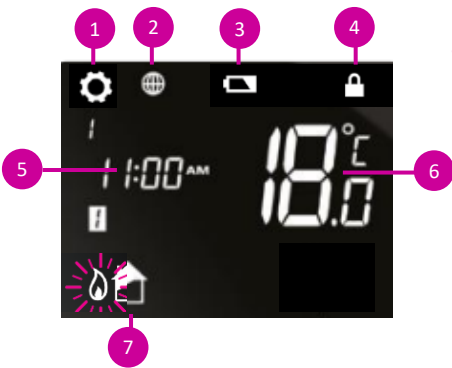



3. Screen Layout

1. Target Temperature Override – see section 4
 2. Internet connection – If not shown contact XXXXXXXX
 3. Low battery – only shown if the battery is needing
 4. Button lock – should be shown unless it has been disabled
 5. Time – Should show correct time
 6. Temperature Indicator
 7. Heating zone – Animated flame shown for demand
- If any of the above seem incorrect contact [Lighthouse](#)

4. Changing target room temperature temporarily

The It500 runs on a heating schedule however if the room feels too hot or cold then the schedule temperature can be overridden

- Wake the screen
- Unlock Screen
- Press or to increase or decrease temperature
- Confirm
- Lock Screen
- The IT500 will return to home screen
- Check that both the override and button lock icons are shown
- If you have increased the target temperature to get heat please check the demand icon is flashing as shown
- To cancel the temperature override press and hold once cancelled the should disappear from home screen

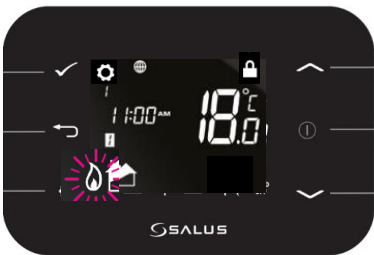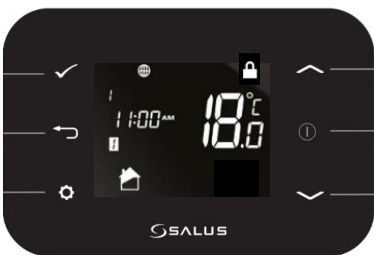



5. Troubleshooting

Problem	Try
Display does not activate when 	Changing batteries (see below)
Demand icon  is not flashing after increasing temperature	Ensure the temporary target temperature is HIGHER than the current room temperature
Demand icon  is still flashing after decreasing temperature	Ensure the temporary target temperature is LOWER than the current room temperature
The screen has frozen	Try removing and re-inserting the batteries. If the issue persists, try a soft reset (see below)

If any of the above can't be resolved please contact [Lighthouse support](mailto:iot@airdale-group.co.uk) 0333 015 0336 or iot@airdale-group.co.uk

6. Changing Batteries in the IT500



- a) Remove IT500 thermostat from the wall be gently pulling from the bottom edge, there are no screws to be removed just gently pull and the unit will detach from the wall mount bracket as shown



- b) At the bottom of the unit remove the battery cover as show



- c) Remove the old batteries and replace with brand new ones, inserting the righthand side battery first



- d) Insert the second battery as shown



- e) Ensure the battery cover is replaced and mount the unit back on the wall

7. Soft Reset on the IT500



- a) Remove IT500 thermostat from the wall be gently pulling from the bottom edge, there are no screws to be removed just gently pull.
- b) Use a paper clip or oin to gently press the pin reset in the hole in the centre on the rear of the thermostat